


burmon **BUCK BRACE** INSTALLATION & FIXING GUIDE

1


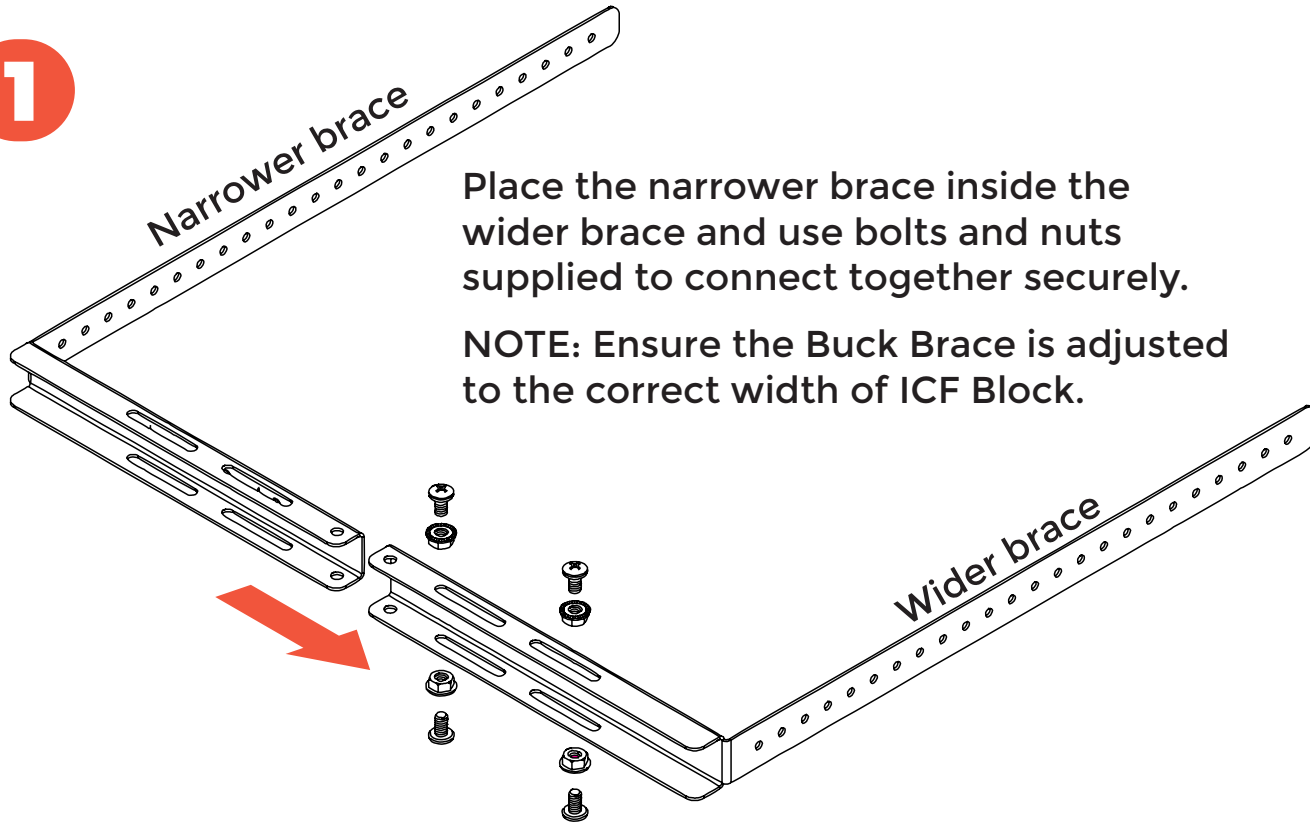


Place the narrower brace inside the wider brace and use bolts and nuts supplied to connect together securely.

NOTE: Ensure the Buck Brace is adjusted to the correct width of ICF Block.

2

Screw the assembled Buck Brace to the sides of ICF wall securely using 2 screws each side spaced as shown.

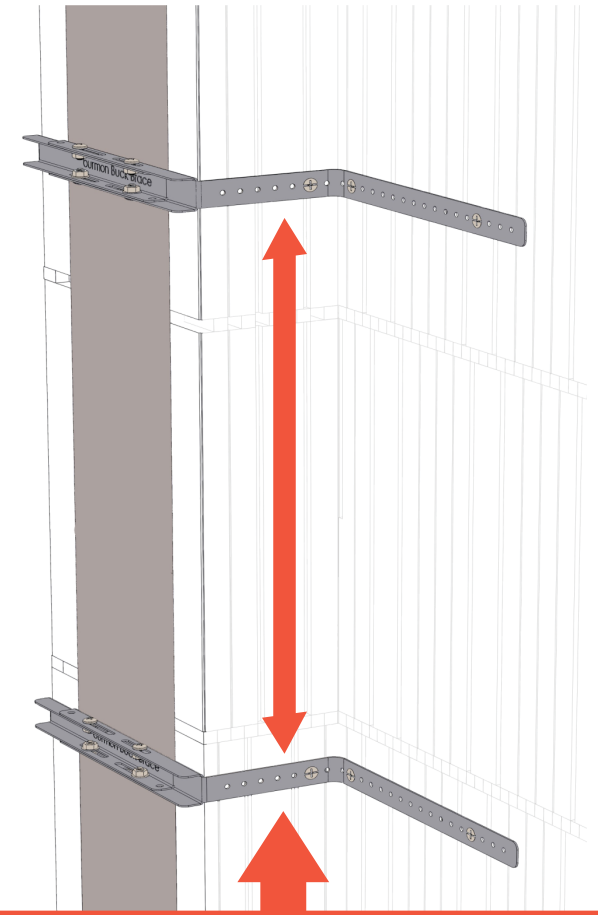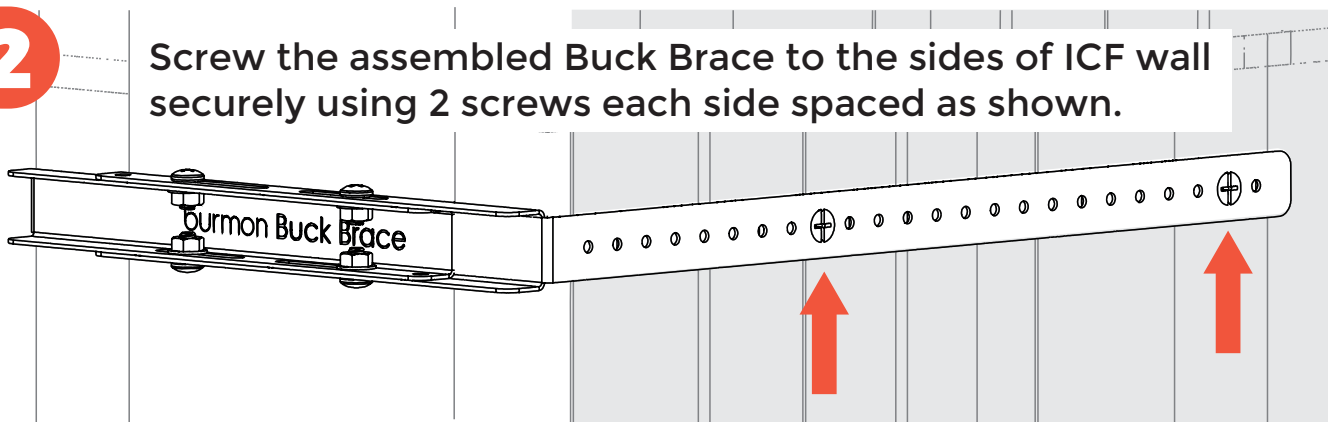

IMPORTANT NOTE: The Buck Brace shall be installed no less than 2 feet apart on a 6-inch core ICF Block and 18 inches apart on an 8-inch core ICF block. This minimum distance between braces will ensure adequate window and door opening bracing.