


INSTALLATION INSTRUCTIONS

Home Slicker® and Home Slicker® 10

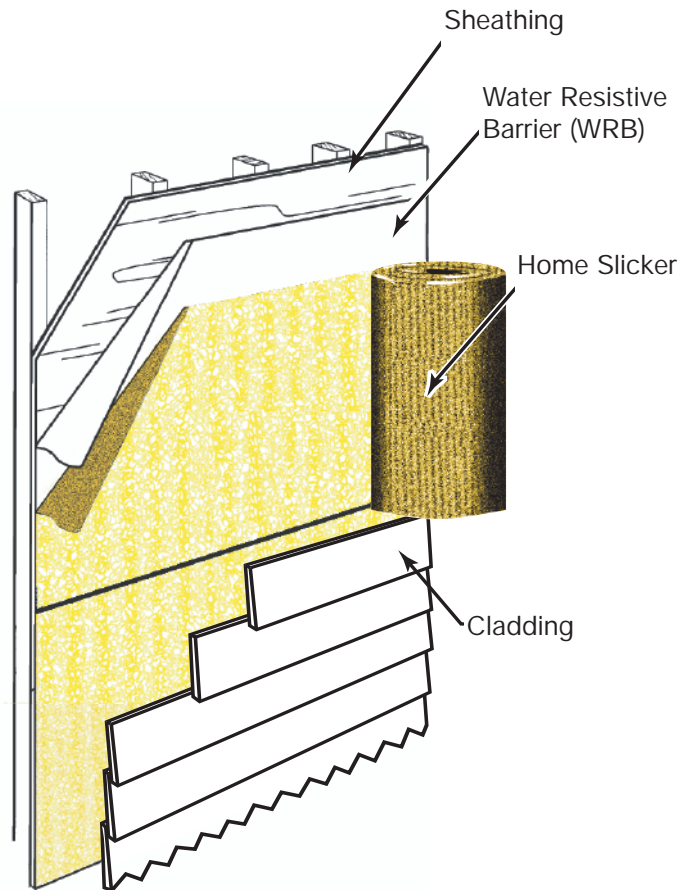

1. Install sidewall sheathing material over studs and apply water resistive barrier per manufacturer's instructions. Install Home Slicker after windows are properly installed and flashed. Refer to window installation for details on flashing integration.
2. Roll out Home Slicker wherever siding or cladding will be applied with channels running vertically. Do not stretch Home Slicker—it should lie flat against the wall. Nail or staple (min. 1/2" staple) every 3 square feet. (For stucco or stone applications, install an additional water resistive barrier over the exposed channels of Home Slicker.)
3. Butt edges of new rolls or new courses together—do not overlap layers of Home Slicker. Cover entire wall surface wherever siding materials will be installed.
4. Install siding or cladding system over wall surface within 30 days of Home Slicker application per manufacturer's installation instructions. Allow for thickness of Home Slicker in nail selection. *Do not overnail.